


Gronograss

Installation guide



Components

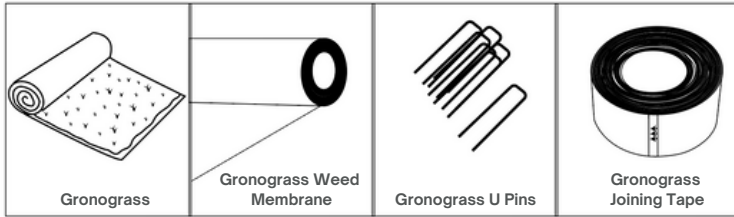


Tools required




Steps

1

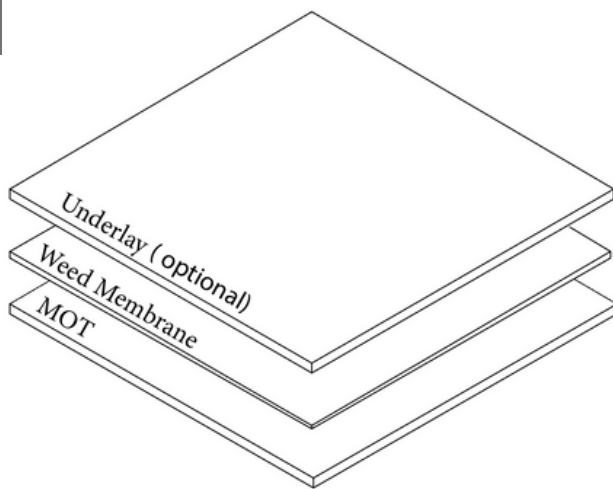


Prepare the base for your artificial grass, using Mot Type 1 and Gronograss Weed Membrane, with the optional step of underlay.

2

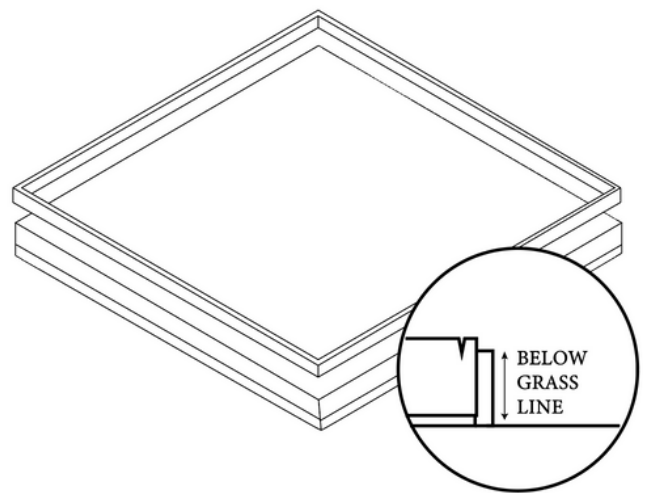


Place the grass edging down. Ensure the edging is not higher than the final grass line, this will allow the water to run-off turf.

3

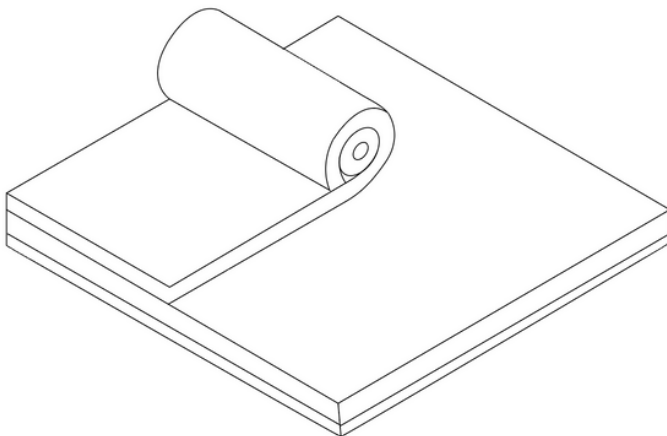


Roll out your gronograss, being careful not to disturb the weed membrane and underlay. Your artificial grass has a directional pile, so it will need to face the same way if you have any joins.


4

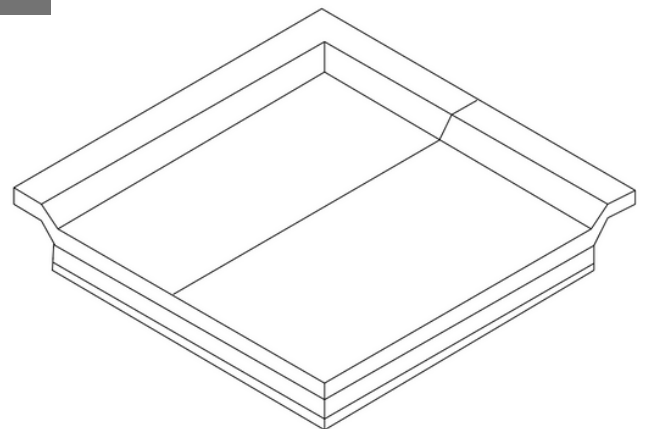


Let the grass settle for a minimum of three hours, or if possible, overnight. This will stop the grass from wrinkling or creasing.

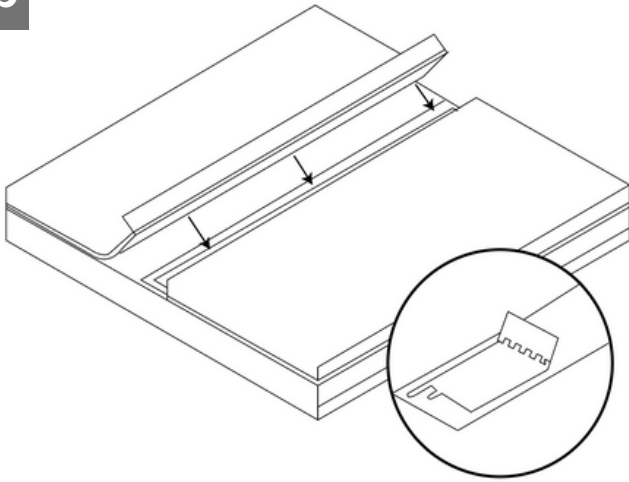4b


Join any pieces together, if required. Use our Gronogras Joining tape and Bond glue.

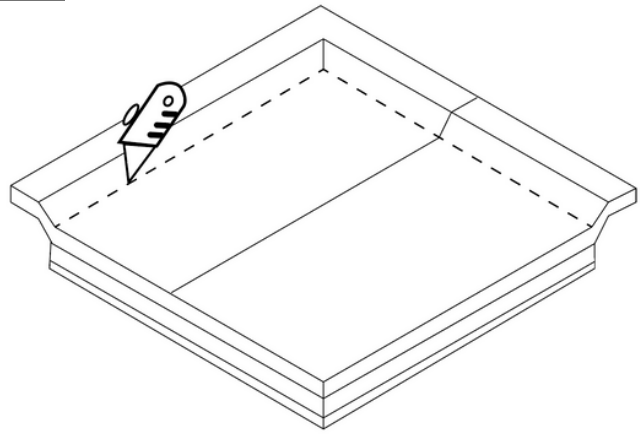5

After the settling process is complete, cut and trim the artificial grass using a sharp stanley knife.

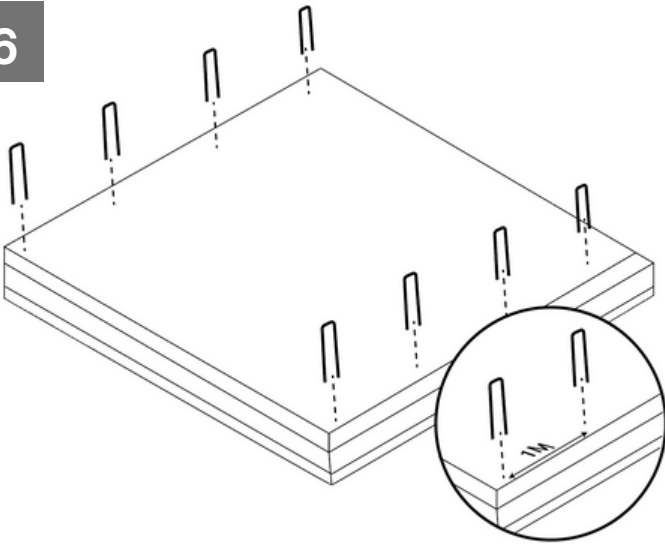6

Pin your artificial grass down, using our Gronogras U Pins.

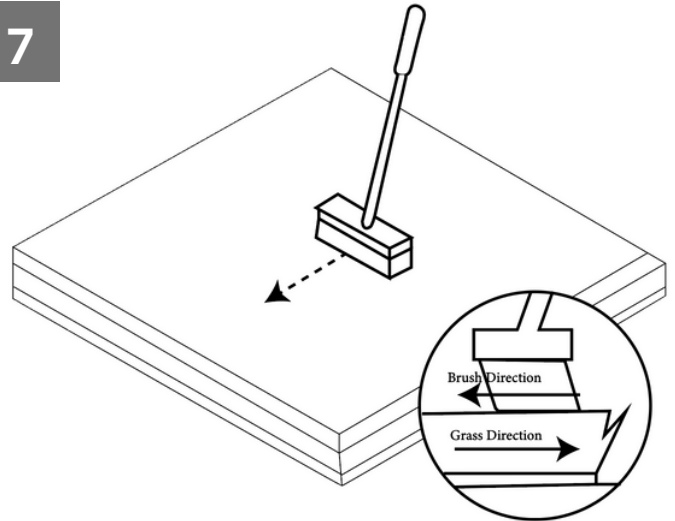7

Finally, brush the grass up against the pile to bring the grass fibres straight and upright.

Installation Check List

- When creating the base for your artificial grass, dig 100mm into the ground and fill 70-75mm with Type 1 MOT and 25-30mm with Sharp Sand
- Make sure the grass pile is facing towards your house or main viewpoint. If you are using 2 or more cuts, please ensure that the pile of each cut is facing in the same direction
- When trimming edges with a Stanley knife, make sure you only cut from the backing of the grass, and not through the grass itself
- To minimise lines and allow for a natural-looking lawn, you should trim each cut 3 stitches in from the joining edge. Of one cut, remove the first 2 stitches and leave the 3rd at the verge edge. For the second cut, remove the first 2 stitches but leave the 3rd and the material between. Once this is done, fold over the edge of the cut and roll the jointing tape down the membrane. Apply Grono Bond Adhesive in a 'zigzag' down each edge of the tape, overlapping onto the membrane
- Brush the grass regularly, we recommend once a week, in the opposite direction of the fibres
- Regularly remove leaves and debris using a leaf blower, for best results, or a stiff brush
- Use a light detergent, such as washing up liquid, and a stiff brush to thoroughly clean the grass. Do not use strong detergents, such as bleach
- Apply weed killer to the whole area, twice a year to prevent weed growth